

Disc Eject Lock Function for INE-W957, X008U and X009U



Step 1. Make sure the unit is in FM1.

Step 2. Press the **1**Band soft key to switch to FM2.

Step 3. While in FM2 press the **2**Preset 5 soft key .

Step 4. Press the **3**Vol Down button twice.

Step 5. Press the **4**Vol Up button twice.

At this time the Disc Eject Lock message will display.

The Disc Eject lock function was disable.