

 
In The Event That the Source Banner Stopped Saving (Source Banner Reset to Factory Default)

In the event the Source Banner on your Alpine unit resets to factory default state, the Source Banner can be reconfigured and saved manually. Source Banner resets can occur from time to time. As an alternative to access your favorite sources faster, we recommend using the “My Favorites” function instead. “My Favorites” not only gives you access to your commonly used sources, it also provides quick access to the radio stations you program. Your frequently called phone contacts and most-used navigation destinations can also be saved as shortcuts in “My Favorites”. Each “My Favorites” profile is linked to a Bluetooth connection, so two users can have direct access to their own customized favorites.

If you have further questions regarding Source Banner reset issues, please contact our Tech Support line at 800-TECH-101 (800-832-4101).

Here’s how linking your Bluetooth device within “My Favorites” works...


My Favorites

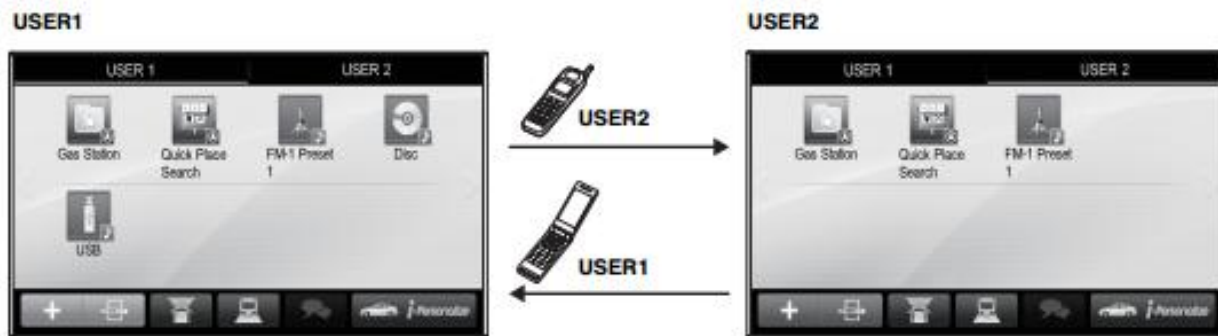

Below is example of what you can personalize using My Favorites:

Using My Favorites

Display example of My Favorites screen

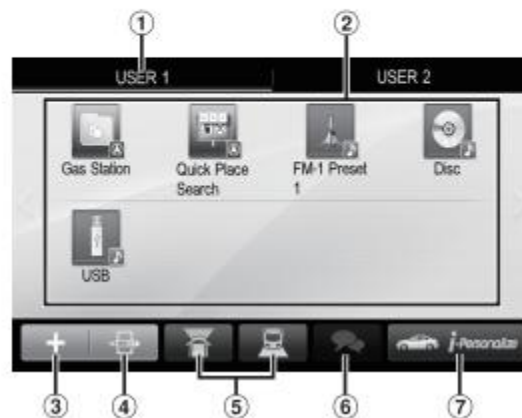

1. User name: Displays the name of the user
2. My Favorites icon: Touching any Icon on the My Favorites screen will switch to the screen for the selected application
3. Add button: Use to add My Favorites icons

4. Edit Button: Use to edit My Favorites icons
5. Camera button: Use to display the camera image (if a rear and/or front camera system is connected)
6. Notification List button: Use to display the Notification List from Facebook in the Smartphone that's connected via this unit
7. i-Personalize button: Use to configure the i-Personalize Setup