
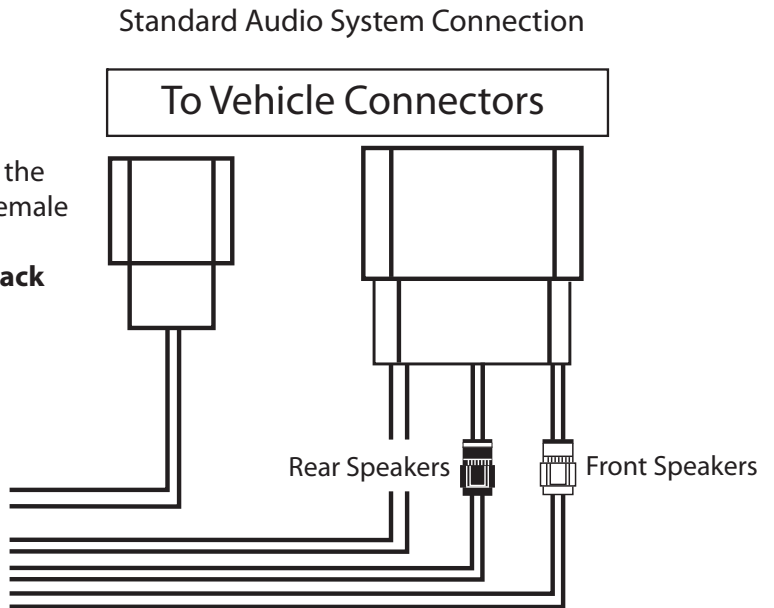


1. Vehicles without a factory amplifier: Connect the front **White** male connector to the front **White** female connector.
Connect the **Black** rear male connector to the **Black** rear female connector.



Standard Audio Front White Male Connector	
Pin	Wire Color
1	White/Black
2	White
3	Gray/Black
4	Gray

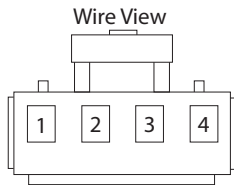

2. Vehicles with a factory amplifier: Connect the front **White** male connector to the rear **Black** female connector.
Connect the **Black** rear male connector to the front **White** female connector.

ONLY ON EARLY PRODUCTION KIT: Please do a visual inspection and verify pin location before proceeding. Pin relocation may not be required.

Premium Audio Front White Male Connector	
Pin	Wire Color
1	Gray/Black
2	Gray
3	White/Black
4	White

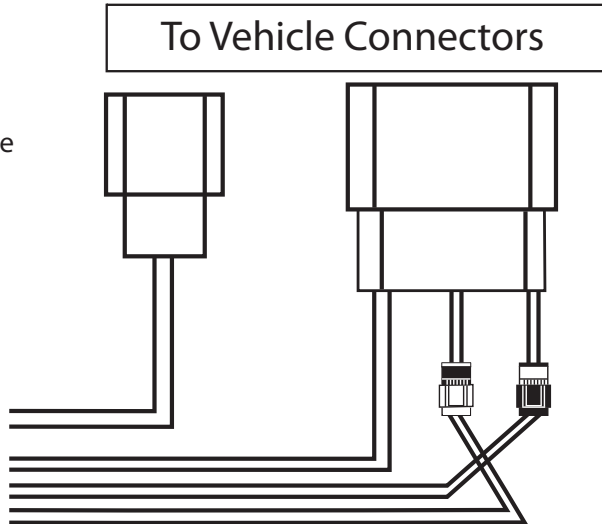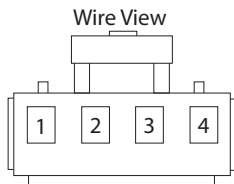

Premium audio system you must remove the speaker pins and relocate them like shown on the picture above.

NOTE: The factory amplifier only accepts two audio channels(left and right). the amplifier fading is controlled by data communication. The aftermarket radio does not have the ability to control the amplifier fading. Following the instructions above will allow the navigation voice prompts and Bluetooth calls to be heard through the system.