

ALPINE RESTYLE


X009-WRA Jeep Wrangler OEM USB Connection

After removing the radio and dash panel, behind the HVAC controls there is a module with the OEM USB connector. Disconnect the OEM cable and plug in the OEM USB adaptor included with the X009-WRA kit. This will allow the OEM USB in the center console to function with the Alpine X009-WRA.



Plug into OEM harness after unplugging it from module.

Module is located under the radio behind the heater controls. USB Plug is located under module.

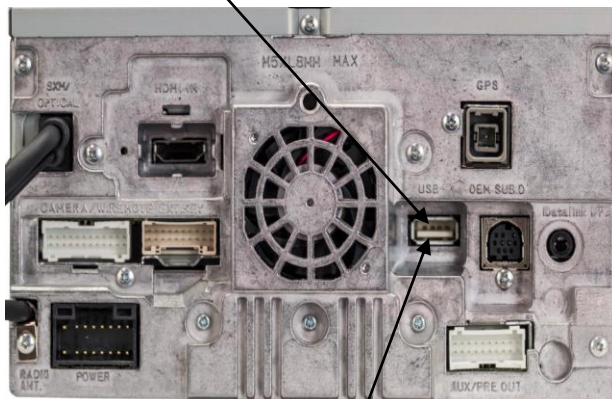

Plug the Alpine USB Interface into the USB input on the back of the X009-WRA using supplied extension cable.

