


Installation of HCE-TCAM1-WRA with X009-WRA ONLY

When installing the HCE-TCAM1-WRA with the X009-WRA, you must cut the brake and reverse trigger wires from the T-harness, run them to the passenger kick panel and connect them to the OEM brake and reverse wires.

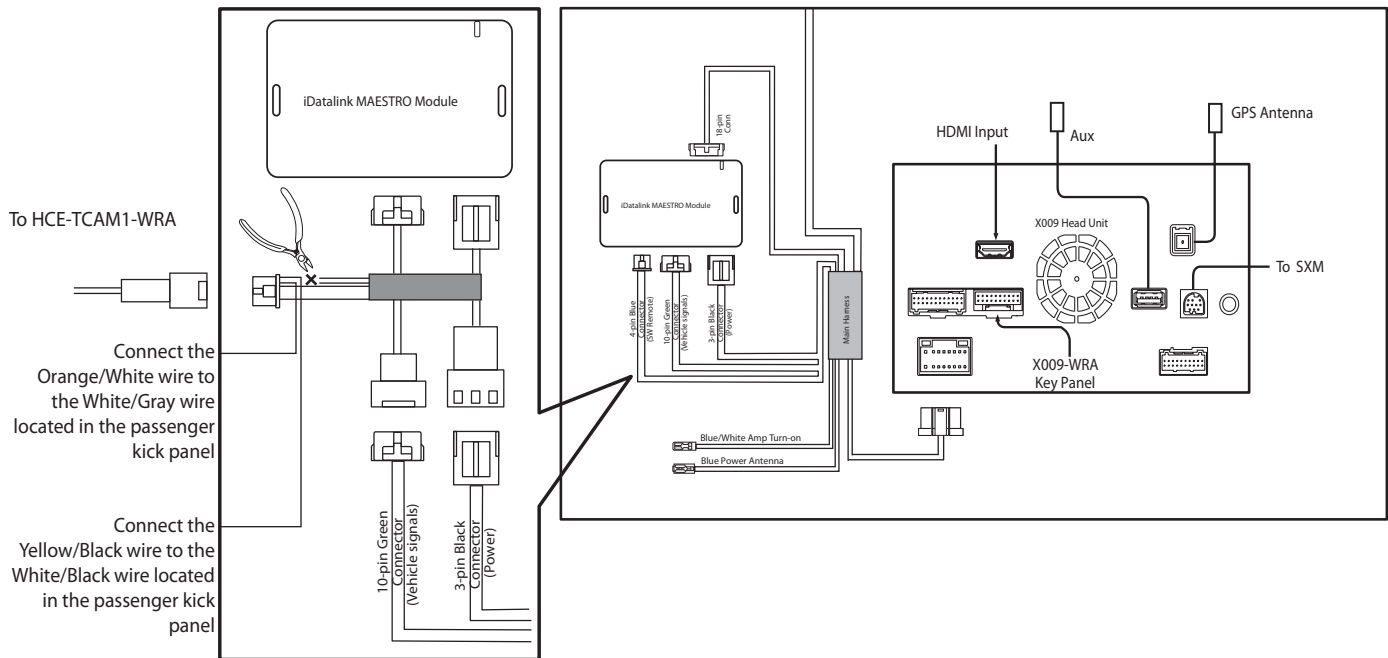

Note: OEM wire colors were verified on tested vehicles, colors may be different. To ensure proper operation,